


# SMALL MOUNTING PARTS (SMP) INSTRUCTIONS



# SMALL MOUNTING PARTS (SMP) INSTRUCTIONS

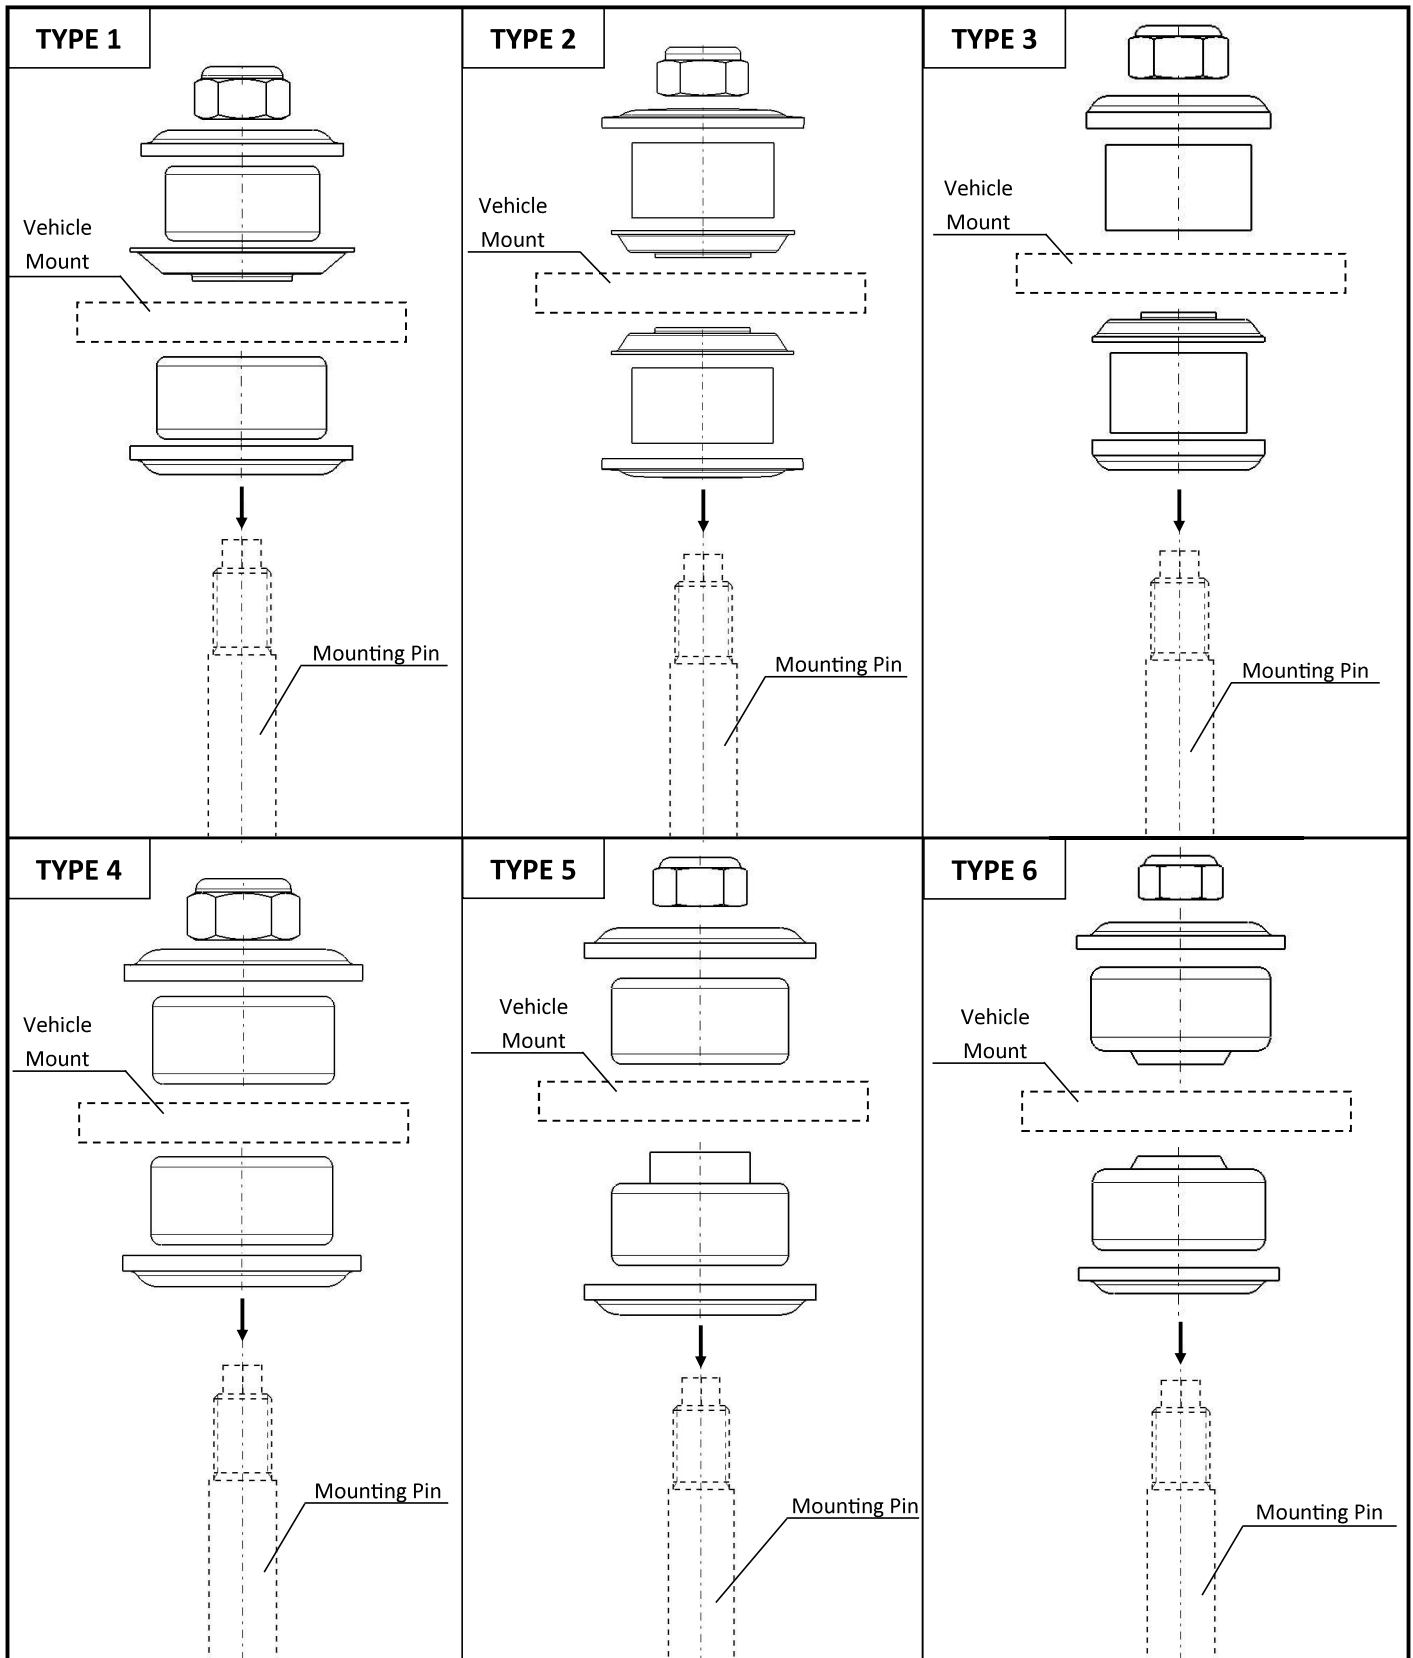


|                                                                                                                                                                                                        |                                                                                            |                                                                                                                                                            |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>TYPE 7</b></p> <p>New Nut (x2)</p> <p>New Bolt (x2)</p>                                                                                                                                          | <p><b>TYPE 8</b></p> <p>New Nut</p> <p>New Washer</p> <p>Strut Top</p> <p>Mounting Pin</p> | <p><b>TYPE 9</b></p> <p>Bushing (x2)</p> <p>OE Washer (x2)</p> <p>New Large Spacer</p> <p>New Small Spacer</p> <p>OE Nut</p>                               |
| <p><b>TYPE 10</b></p> <p>Bushing (x2)</p> <p>OE Washer (x4)</p> <p>OE Nut (x2)</p> <p>New Large Spacer (x2)</p> <p>New Small Spacer (x2)</p> <p>*Re-use original retainers, spring washer and nut.</p> | <p><b>TYPE 11</b></p> <p>Bushing</p> <p>New washer</p> <p>OE Nut</p>                       | <p><b>TYPE 12</b></p> <p>Bushing</p> <p>New Large Spacer</p> <p>OE Washer (x2)</p> <p>OE Nut</p> <p>*Re-use original retainers, spring washer and nut.</p> |

- To ensure correct fitment of small mounting parts reference type number on SMP bag to above chart

# ADJUSTABLE SPRING SEAT INSTRUCTIONS





## Spring seat assembly

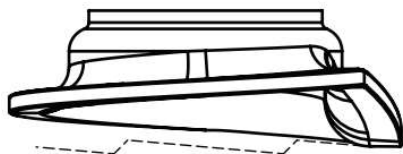


### 58mm Body (Formed seat)

PLACE SPACER BELOW SPRING SEAT IF REQUIRED; USE 1 MAXIMUM

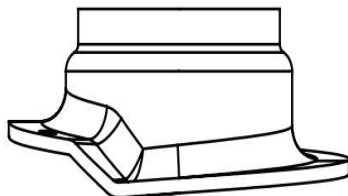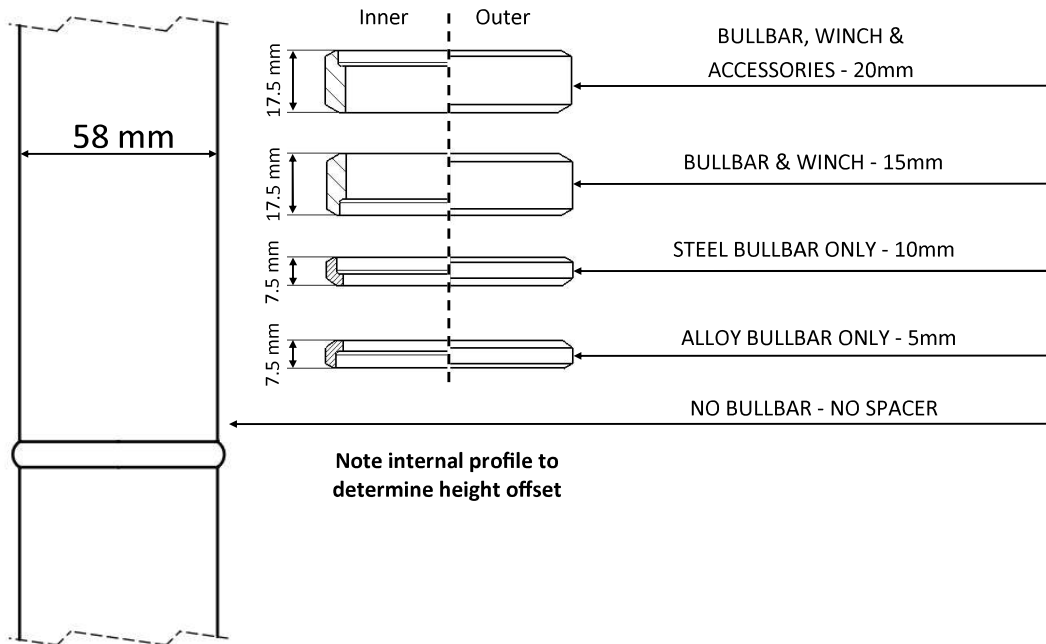

### 50mm Body (Grooved seat)

POSITION SPRING CLIP  
AT REQUIRED HEIGHT

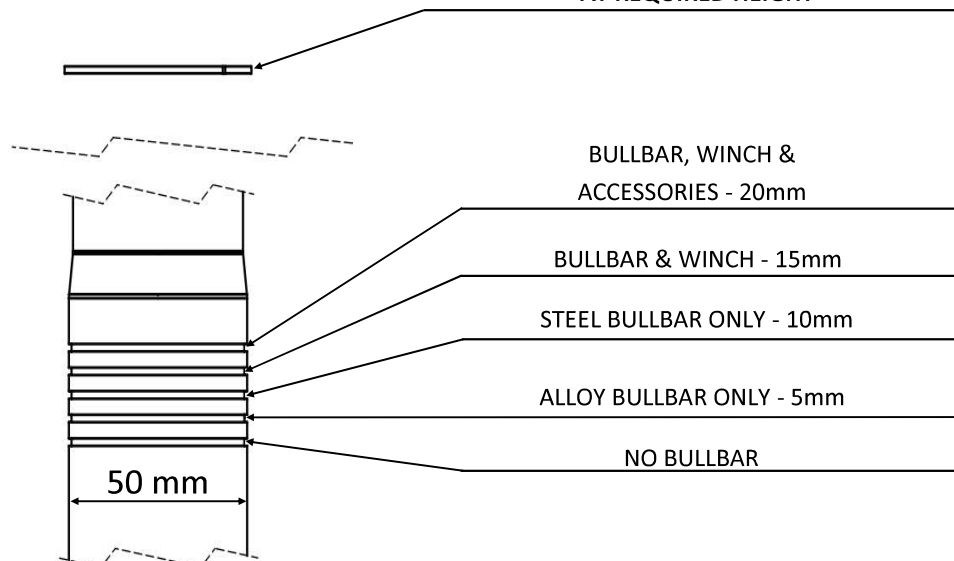


## ADJUSTABLE SPRING SEAT INSTRUCTIONS




**Install jounce cap after spring seat assembly**

### 58mm Body

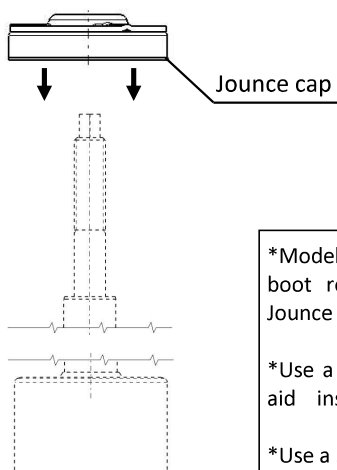

### 50mm Body

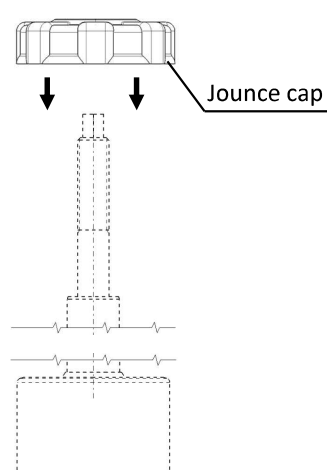

\*Models supplied without dust boot require OE dust boot and Jounce bumper to be re-used


\*Use a small amount of grease to aid installation of jounce cap

\*Use a soft hammer to install cap

## MOUNTING INSTRUCTIONS

### List of Torques

| Thread         | M8 | M10 | M12 | M14 |
|----------------|----|-----|-----|-----|
| Torque (Nm)    | 13 | 25  | 45  | 72  |
| Torque (ft lb) | 10 | 19  | 34  | 54  |

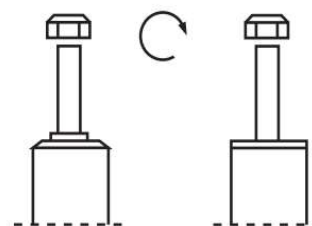

**Do not use an impact tool to loosen or tighten fasteners due to possible damage to the product. Self-locking nuts must only be used once.**



## WARNING

- Refer to Vehicle Manufacturer's specifications for torque values.
- Do NOT use an impact gun for installation of this product
- Do not use this product for any vehicle make or model, other than those specified by Old Man Emu / ARB.
- Do not remove labels from suspension components.
- This product or its SMP kit must not be modified in any way.
- The installation of this product may require the use of specialised tools and/or techniques.
- All rubber mounted strut/shock absorber attachments must not be fully tightened until after the suspension system is loaded (wheels on the ground)
- During installation, it is the duty of the installer to check correct operation/clearances & replace any worn component/fastener(s).
- Work safely at all times.