

ASSEMBLY INSTRUCTIONS TO SUIT **GREASABLE SPRING SHACKLE**


Part No OMEGS7

PROCEDURE - REFER DIAGRAM OVERLEAF

- 1. Screw short thread end of greasable pins completely into threaded side plate and tighten firmly.**
- 2. Place locking 1/2 nut on protruding thread and torque to 30ft lb (41Nm).**
- 3. Install OME polyurethane bushes (greased) in hanger and spring eyes.**
- 4. Install partly assembled shackle to chassis mount and spring eye.**
- 5. Complete shackle assembly by placing non threaded anti inversion side plate in position. Note: The plate is fitted to the inside of the chassis facing to the front of the vehicle. Tighten shackle pin nuts to 60ft lb (81Nm) torque.**
- 6. Install grease nipples into shackle pins and grease with OME grease pt/no ESG1002.**

GREASABLE SPRING SHACKLE ASSEMBLY INSTRUCTIONS PART NUMBERS: OMEG57

MOUNTING POSITION

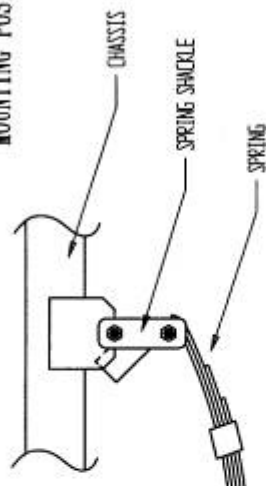

GENERAL ASSEMBLY

